


60M / MEDICAL-LIFE SCIENCES SEALING CONNECTION TOOL

Sleeve actuated external grip and seal connection tool for medical leurs

CONNECTS TO:

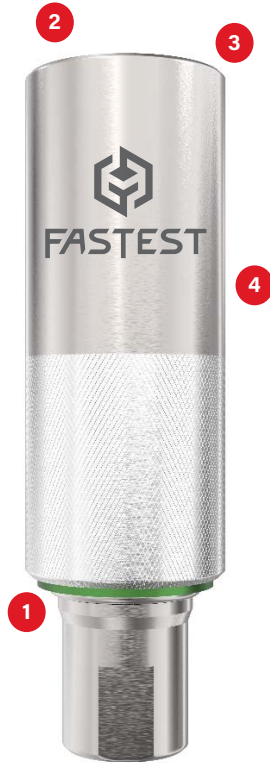

SPECIFICATIONS

Pressure Rating	Operating Temperatures	Materials of Construction
Vacuum to 750 psi (51.7 bar)	0°F to +200°F (0°C to +93°C)	Stainless Steel, Anodized Aluminum
Termination Port		Seal Material*
1/8 FNPT		FDA approved FKM seals

* Additional seal material types available, consult factory.

ACTUATION METHOD

Sleeve Actuated: Easy, ergonomic sleeve action eliminates repetitive twisting and turning - push to connect, pull to release

ICON™ TECHNOLOGY


Consult Factory

ACCESSORIES

Visit fastestinc.com

- 1 SurConnect™ - Green to go visible indicator to ensure complete connection
- 2 Instant external threaded connection with floating piston to ensure proper ID sealing position
- 3 Seals against any full and partial threaded standard luer
- 4 Cleaned and lubricated for oxygen safe environment with FDA approved seals

60M / MEDICAL-LIFE SCIENCES SEALING CONNECTION TOOL

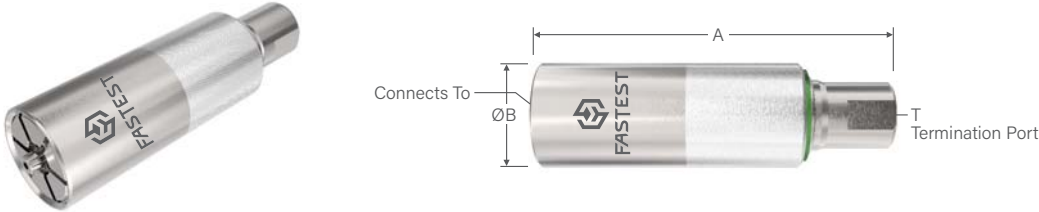

Ordering Information				Dimensions		
Connects To	Part Number	Replacement Seals Bulk Pack (5)	Rebuild Kit	A	B	T
60M Luers						
Luer	60MP0340	S60MP0340	R60MP0340	2.92 (74.2)	0.88 (22.5)	1/8 NPT

Dimensions: inch (mm)

Luer Specifications: ISO 594

i All parts are washed in an aqueous solution utilizing ultrasonic agitation at a temperature of 140°F. Components are then rinsed in a cascading rinse tank and dried using 99.999% pure nitrogen and assembled in a 100,000 ppm level controlled environment.

Krytox is the standard lubricant.

Components are double bagged for shipping integrity.